

1. Product highlights:

1.1 equipped with start-stop button, and can be external switch control, to meet various customer control requirements

1.2 motor soft start function. When starting the motor, the current increases slowly and there is no shock current, which can effectively protect the motor and prolong its service life

1.3 duty cycle, duty cycle upper and lower limits and working frequency can be set to facilitate customers to operate and use their motors according to their working characteristics.

1.3 digital encoder knob adjusts motor speed, which is more accurate and consistent than ordinary potentiometer.

1.4 with standard 5135 instrument shell, convenient for customer installation.

2. Technical parameters:

2.1 working voltage: **DC9V~60V**, input anti-reverse connection protection

2.2 rated current:**12A** maximum current **20A**

2.3 maximum power:**500W**

2.2 working frequency: 1KHz~99KHz adjustable, 1KHz step, default frequency of 20KHz, accuracy of about 1%

2.3 duty cycle: 0-100%, 1% step

2.4 product size: 79mm*43mm*26mm

2.5 product weight: 41g

2.6 packaging: carton packaging

All parameters can be set to power down storage.

Motor start and stop indicator light:
light on when starting, light off when stoped




Digital tube: display duty cycle

Shuttle key: rotate to adjust the duty cycle,
and press to control the motor start and stop

3. Operation instructions:

3.1 wiring instructions

Switch signal can be connected to control motor start and stop

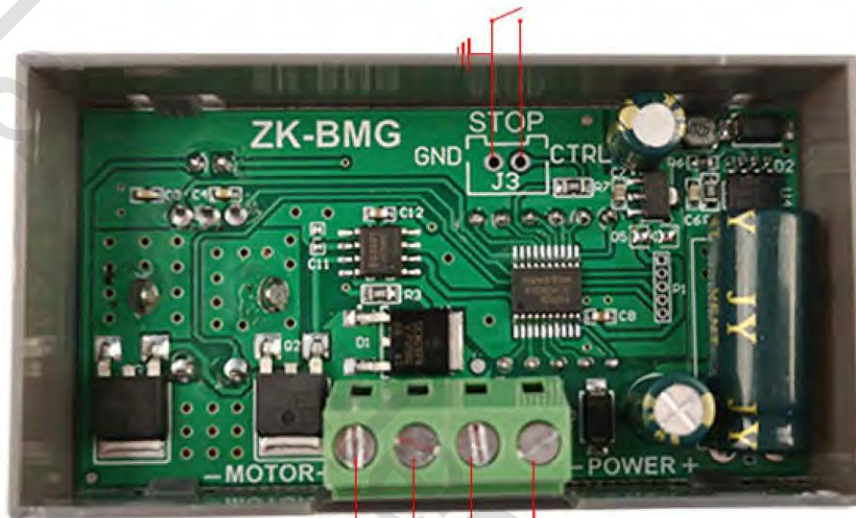

the motor output negative

the motor output positive

power input positive

power input negative

3.2 Enemy word number machine rotary button operation

In the tacit recognition and: (silent recognition is the duty-free ratio)

short press _____ can the motor to start and stop

press for 10 seconds _____ go to the settings interface

Rotate counterclockwise _____ the duty-on ratio is reduced

Rotate clockwise _____ the duty-on the duty is increased

Under the set-up:

Short press one selection to set the parameters, set the parameters in ON-OFF ,duty-bound lower limit, occupied.

Between the air ratio upper limit and the operating frequency,the cut is changed.ON-OFF is the setting module that is normally open and normally closed by default,spin.

Transcoder changes the ON-OFF-shaped state,the space ratio below the limit display pattern is"L"and two-digit number word

Long press — to enter the setting interface

Counterclockwise rotation — the duty ratio decreases

Clockwise rotation — increased duty cycle

Under the setting screen:

Short press — select setting parameters and switch between duty cycle lower limit, duty cycle upper limit and working frequency. The display form of duty cycle lower limit is "L" + two digits, the display form of duty cycle upper limit is "H" + two digits or "100", and the display form of working frequency is "F" + two digits.

Long press — exit the setting interface

Counterclockwise rotation - the corresponding Settings are reduced

Clockwise rotation - the setting parameters increase accordingly

3.3 back STOP port

Switch key or 3.3v level can be externally connected. Switch the start/stop state of the motor when the key is closed or 3.3v level is lowered.